

ASSEMBLY PROCEDURE...

11) Install all kickplates...kickplates snap directly in from front...

12) Pull both end uprights forward to bring the kickplates to the chalkline, then plumb using a level against face of upright and adjusting the base shoe levelers.

13) Attach the nylon line to end upright as shown. Attach line at corresponding slot on opposite end upright, draw taut and secure.

14) Examine all uprights at nylon line to determine the highest upright in run, excluding end uprights. Pull this highest upright forward until kickplate is on the chalkline. If run is a gondola, plumb at base shoe levelers ...If run is a wall, plumb at upright and base shoe levelers.

IMPORTANT!

There must be enough clearance between the bottom of the upright and the head of the level leg to allow installation of anchors!

STEP 11 KICKPLATES

SFA-RD REGULAR DUTY FLOOR ANCHOR, REQUIRES ONE (1) FASTNER TO FLOOR

SFA-HD REGULAR DUTY FLOOR ANCHOR, REQUIRES TWO (2) FASTNERS TO FLOOR

NOTE: IF IT BECOMES NECESSARY TO EXTEND THE LEVELING LEGS BEYOND 1-1/2" SHIMS MUST BE USED TO RAISE THE FLOOR LEVEL.

15) Working with the remaining uprights in succession, bring kickplates up to chalkline, then adjust for height at upright leveler and plumb at base shoes.

16) Raise or lower end uprights until slots on ends and highest upright correspond relative to the nylon line. THEN REPLUMB BOTH END UPRIGHTS!

WARNING! NEVER EXTEND LEVEL LEGS OVER 1 1/2"!

madix™
STORE FIXTURES
P.O. BOX 729 TERRELL, TEXAS 75160
214-515-5400 / 800-776-2249
ASY-046 PAGE 9 OF 15 REV. 06
10/18/06 AJB ECN#500000010840

ASSEMBLY PROCEDURE...

UC - STEP 20 STL-(NW) - STEP 19

UC UPRIGHT CAP UC - STEP 20

VC UPRIGHT COVER STEP 19

SBS BASE SHELF STEP 23

BS - STEP 21

CHALK LINE

CHECK ALIGNMENT AND LEVEL OF RUN BEFORE ANCHORING!

TABS ON SPANNER WILL NEED TO HAVE TABS REST BEHIND TOP LANCE AS SHOWN

17) On gondola uprights only: Run level legs up off the floor approximately 1/4". THIS APPLIES TO ALL GONDOLA UPRIGHTS REGARDLESS OF ANCHORING. ONLY BASE SHOE LEVELERS ARE ANCHORED ON GONDOLAS, NOT UPRIGHT LEVELERS.

18) Remove the nylon string used in leveling and install all remaining back panels in the run.

19) Install top spanners. Make sure tabs rest below first lance as shown. Install upright end covers. UEC is plastic and VC is metal. THESE MUST BE IN PLACE BEFORE UC (UPRIGHT CAPS) ARE INSTALLED.

20) If VCs (metal upright covers) are installed, install UC (upright caps) so that the short plastic extrusion is captured in the slot at top of the VC and tabs snap behind top lance See illustration top right.

21) To install the BECs (Base End Covers), simply slide them over the BS (Base Shoes). The BECs are held in place by the base shelves.

22) VERIFY ALIGNMENT AND LEVEL OF RUN. If floor anchors are required, install them now. SEE ASY-357 FOR PROPER ANCHORING PROCEDURES.

23) Install base shelves. Visually check base shelf alignment.

24) Install upper shelves and accessories.

NOTE: If trim or shelves do not fit or do not pass visual inspection, recheck plumb & level. If run is not plumb and level, return to steps 13 - 16.

IMPORTANT! DO NOT DROP BACKS ONTO THE LOWER SPANNERS!

WARNING! DO NOT HANG SHELVING, PEG HOOKS OR OTHER ACCESSORIES THAT EXCEED THE DEPTH OF THE BASE ON A GONDOLA OR WALL.

madix™
STORE FIXTURES
P.O. BOX 729 TERRELL, TEXAS 75160
214-515-5400 / 800-776-2249
ASY-046 PAGE 10 OF 15 REV. 06
10/18/06 AJB ECN#500000010840

WALL RUN INSTALLATION AND WALL RUN ANCHORING...

Uprights will be anchored to a single run of 2 x 4 furring strips secured at approximately 8" below the top of the uprights, subject to leveling.

*Determine run length and location...then strike a chalkline on the wall at upright height, minus 8", to align the top edge of the furring strips.

*Start with a 10' long 2 x 4, finishing the rest of run with 8' long 2 x 4's, this insures that uprights will not be on a joint

IMPORTANT!

IF CANOPY IS TO BE USED, CONSULT INSTALLATION INSTRUCTION ASY 092 PRIOR TO PROCEEDING

ONE 2X4 FOR UPRIGHTS UP TO 96"
TWO 2X4s FOR UPRIGHTS OVER 96"
ONE 2X4 FOR EXTENSION (EU) UP TO 36"
TWO 2X4s FOR EXTENSIONS (EU) OVER 36"

Installation of wall fixture follows same procedure as the gondola instructions, steps 1 through 11, EXCEPT:

*No chalkline is necessary...set back of uprights approximately 1" away from furring strips.

*If using basic upright wall mount support, BUWMS, install in rear side of upright in 10th slot from top.

Push fixture back against furring strips and proceed with plumb and level steps 12 through 16, visually sighting kickplate alignment.

*If using BUWMS wall mount support, secure to furring strips with appropriate hardware, shimming behind the BUWMS as necessary.

*If not using BUWMS, secure upright to furring strip with appropriate fasteners into 10th slot from top.

Complete steps 17 through 21.

*If base shelves have a wedge shaped gap, it will be necessary to push in at the gap and/or pull out at the adjacent joints...readjustment of the base shoe levelers may be necessary.

WARNING!

FAILURE TO PROPERLY ANCHOR WALL FIXTURE SYSTEMS AND EXTENSIONS MAY RESULT IN SEVERE INJURY OR DEATH!

USE ANCHORING HARDWARE THAT RESISTS A MINIMUM OF 800 lbs. PULL OUT FORCE. MANY TYPES OF WALL CONSTRUCTION WILL BE ENCOUNTERED. USE FASTNERS APPROPRIATE FOR BOTH WALL TYPE AND LOAD SITUATION. CONTACT A LOCAL STRUCTURAL ENGINEER FAMILIAR WITH CODES IN YOUR AREA. MADIX CAN PROVIDE THE CONTACT FOR A STRUCTURAL ENGINEER IF REQUIRED.

madix™
STORE FIXTURES
P.O. BOX 729 TERRELL, TEXAS 75160
214-515-5400 / 800-776-2249
ASY-046 PAGE 11 OF 15 REV. 06
10/18/06 AJB ECN#500000010840

FIXTURE LOADING AND PRODUCT SAFETY...

GENERAL

1) Contact the local building department prior to starting installation to check on any restrictions.

2) Only parts and accessories produced or supplied by Madix are covered by Madix warranty.

3) Installation sequence must be followed exactly for assembly and leveling.

4) Under no circumstances should damaged parts be used.

5) Do not use shelving parts or accessories for any purpose other than originally intended.

6) Installation instructions with product load ratings are included with each order and must be followed carefully.

7) Employees must be made aware of possible overloading as specified in load ratings. If you do not receive these, please contact your sales or customer service representative.

8) Initial installation or relocation of Madix gondola or wall fixtures should be supervised exclusively by qualified personnel.

GONDOLA /WALL SHELVING

9) Never install shelves or accessories into the side of an upright that has no base shoes on that side.

10) Be sure all shelving parts or accessories are completely seated in slotting or perforations.

11) Do not permit climbing or standing on shelving at any time...including base shelves.

12) Do not attempt to relocate merchandised shelves or accessories.

13) Never try to move completed fixtures, especially if merchandised.

14) No shelves or accessories should project past the front of the base shelf.

15) Base end covers and upright end covers must always be installed at the end of a run.

16) To avoid collisions with upper shelves or accessories, all displays used on gondolas end should have a base shelf, metal end flat, or other base end treatment.

IMPORTANT!

WARNING! ALL CAPACITIES ARE FOR EVENLY DISTRIBUTED LOAD.

CAPACITIES ARE REDUCED BY 30% WHEN ONLY THE FRONT HALF OF THE SHELF IS LOADED!

CAPACITIES LISTED ARE FOR SHELVES INSTALLED IN MADIX MAXI SHELVING SYSTEM ONLY!


madix™
STORE FIXTURES
P.O. BOX 729 TERRELL, TEXAS 75160
214-515-5400 / 800-776-2249
ASY-046 PAGE 12 OF 15 REV. 06
10/18/06 AJB ECN#500000010840

Shelf Type	Shelf Depth	MAXIMUM LOAD CAPACITY* IN POUNDS			
		Evenly Loaded	Front Loaded	15° Down	30° Down
SUS-000	6" - 8"	300#	300#	125#	100#
	8" - 18"	500#	350#	125#	100#
	20" - 24"	500#	350#	250#	100#
STP-000	6" - 8"	300#	300#	250#	100#
	8" - 18"	600#	350#	250#	100#
	20" - 24"	600#	350#	250#	100#
HUS-000	6" - 8"	400#	250#	200#	100#
	8" - 18"	600#	n/a	n/a	n/a
	20" - 24"	600#	n/a	n/a	n/a
SBS-000	6" - 8"	600#	n/a	n/a	n/a
	8" - 18"	600#	n/a	n/a	n/a
	20" - 24"	600#	n/a	n/a	n/a

* Based on evenly distributed static loading

* STP type shelves are "straight fit", horizontal insertion into upright slotting

DO NOT SCALE THESE DRAWINGS

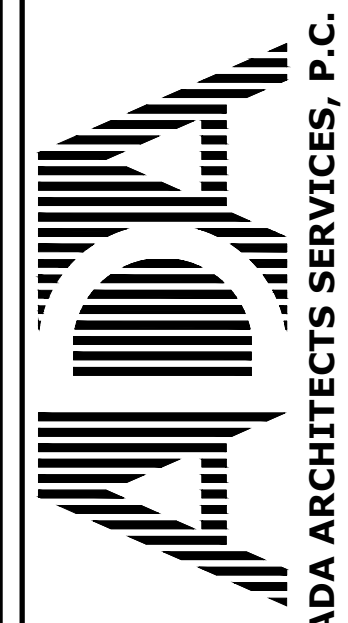

ADA ARCHITECTS SERVICES, P.C.
Lakewood, Ohio 44107
17710 Detroit Avenue
Phone (216) 521-5134
Fax (216) 521-4824
www.adaarchitects.cc

HARBOR FREIGHT TOOLS

NYACK, NY 10960

314 NY ROUTE 59

THESE DOCUMENTS CONTAIN INFORMATION PROPRIETARY TO ADA ARCHITECTS SERVICES, P.C.
UNAUTHORIZED USE OF THESE DOCUMENTS IS EXPRESSLY PROHIBITED UNLESS AGREED UPON IN WRITING.

REVISIONS

#	DATE	TYPE
1		
2		
3		
4		
5		
6		
7		
8		
9		

FIXTURE SPECIFICATIONS AND DETAILS

DATE 9/22/21

JOB NO. 20420

A1.6

SHEET NO.