


(2) TYPICAL INTERIOR STUDS AT EACH X-BRACED SHEAR WALL END. SEE DETAIL 4 / S4.1	
FOR STUD ATTACHMENT ATTACH STRAP TO GUSSET WITH (20) #12 SCREWS. ATTACH GUSSET TO	
DOUBLE STUDS AND BOTTOM TRACK WITH EQUAL NUMBER OF SCREWS	\bigwedge
S/HD15S HOLD DOWN WITH 1" Ø EPOXY ANCHOR (ASTM F1554 — GR 55) WITH 12" EMBEDMENT	

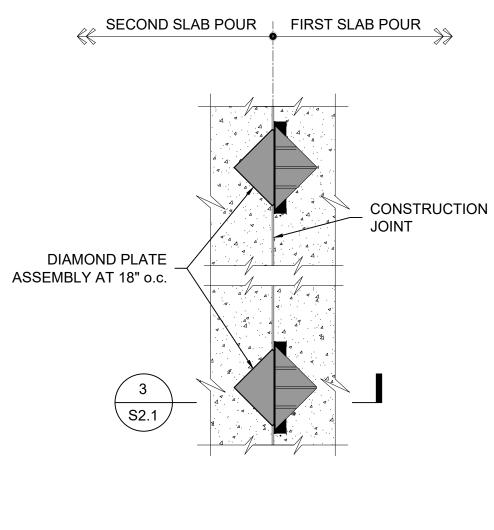




bennett&pless


Experience Structural Expertise Atlanta, Boca Raton, Charlotte, Chattanooga, Knoxville, Nashville, Orlando


1964 — 2020 Celebrating 56 Years of Structural Excellence

47 Perimeter Center East, Suite 500 Atlanta, Georgia 30346 Tel. 678 990 8700 Fax. 678 990 8701 Copyright 2020 — Bennett & Pless, Inc. All Rights Reserved B & P Job Number 20.00.061

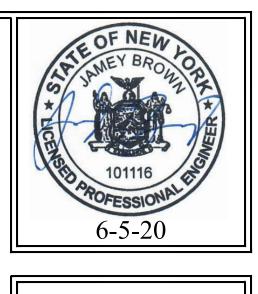

HE SING SING STINAR STINAR STINAR ITHOUT ISSION ISSION WIT ISSION WIT ISSION WIT ISSION WIT ON WIT ONS ML AWINGS AN ERTY OF S TURE, INC. DUCED WIT T'S PERMIS FOR USE ONJUNCTIC ARE NOT ERENT SIT DIMENSIO DIMENSIO _____U <u>___</u> <u>__</u>__ <u>__</u>__ <u>__</u>__ <u>__</u>__ <u>__</u>___

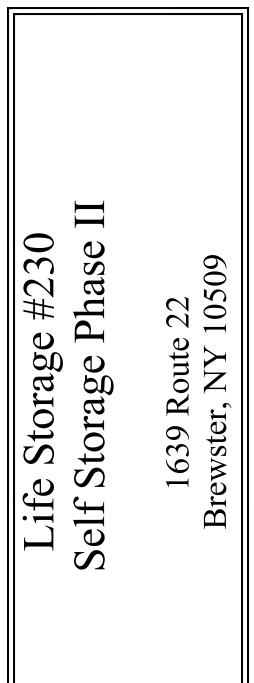

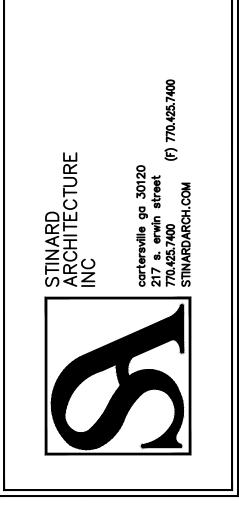

ISSUE: FOR CONSTRUCTION REVISIONS:

201941 DATE 6-5-20

SHEET NUMBER

PROJECT NUMBER

