



- NOTES:
1. CAREFULLY CUT THE VERTICAL MULLION AND REMOVE THE BOTTOM ROW OF WINDOWS.
 2. REMOVE, RISE, MODIFY AND RESET LOUVERS. INSTALL BACKER ROD AND SEALANT AT LOUVER'S PERIMETER.

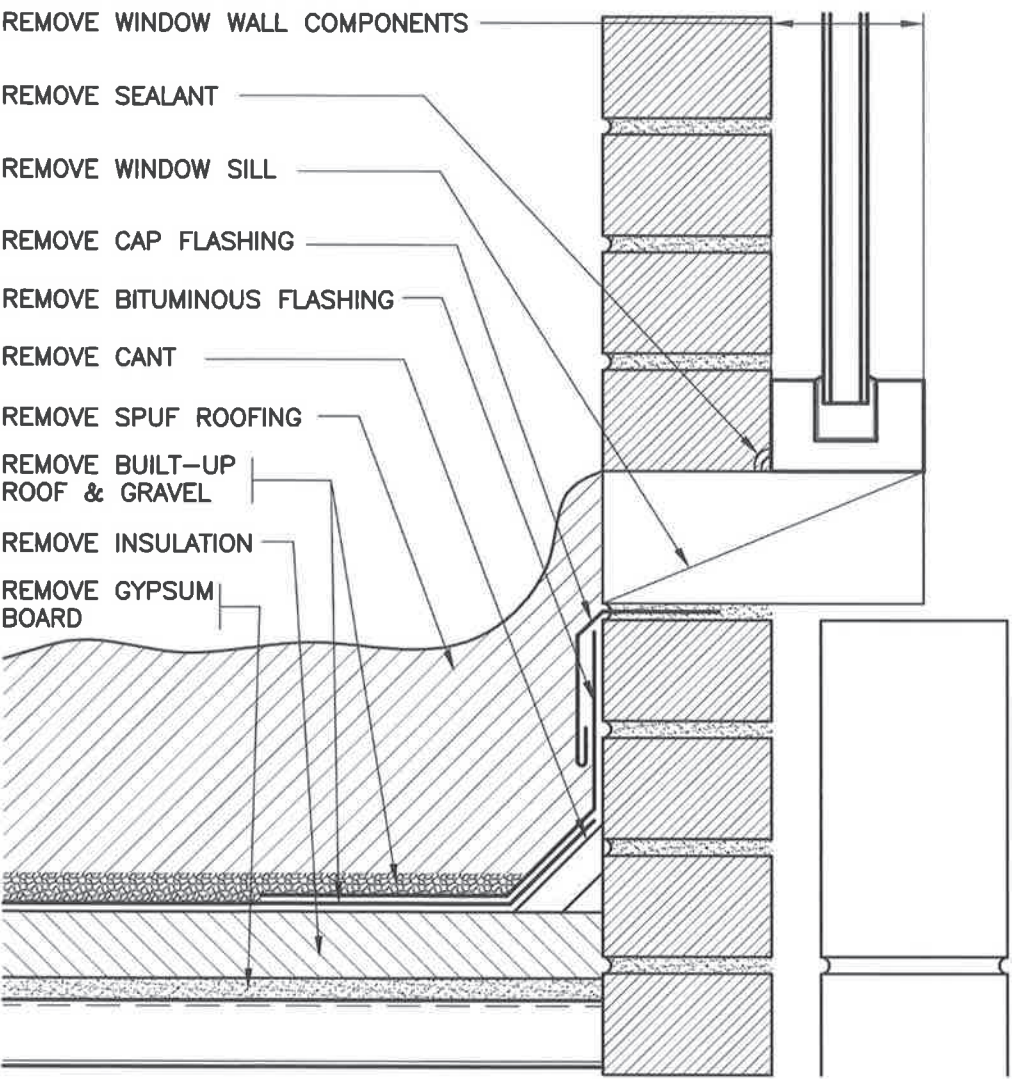

15 EXISTING WINDOW
SCALE: 0" 1" 2" 4" 8"

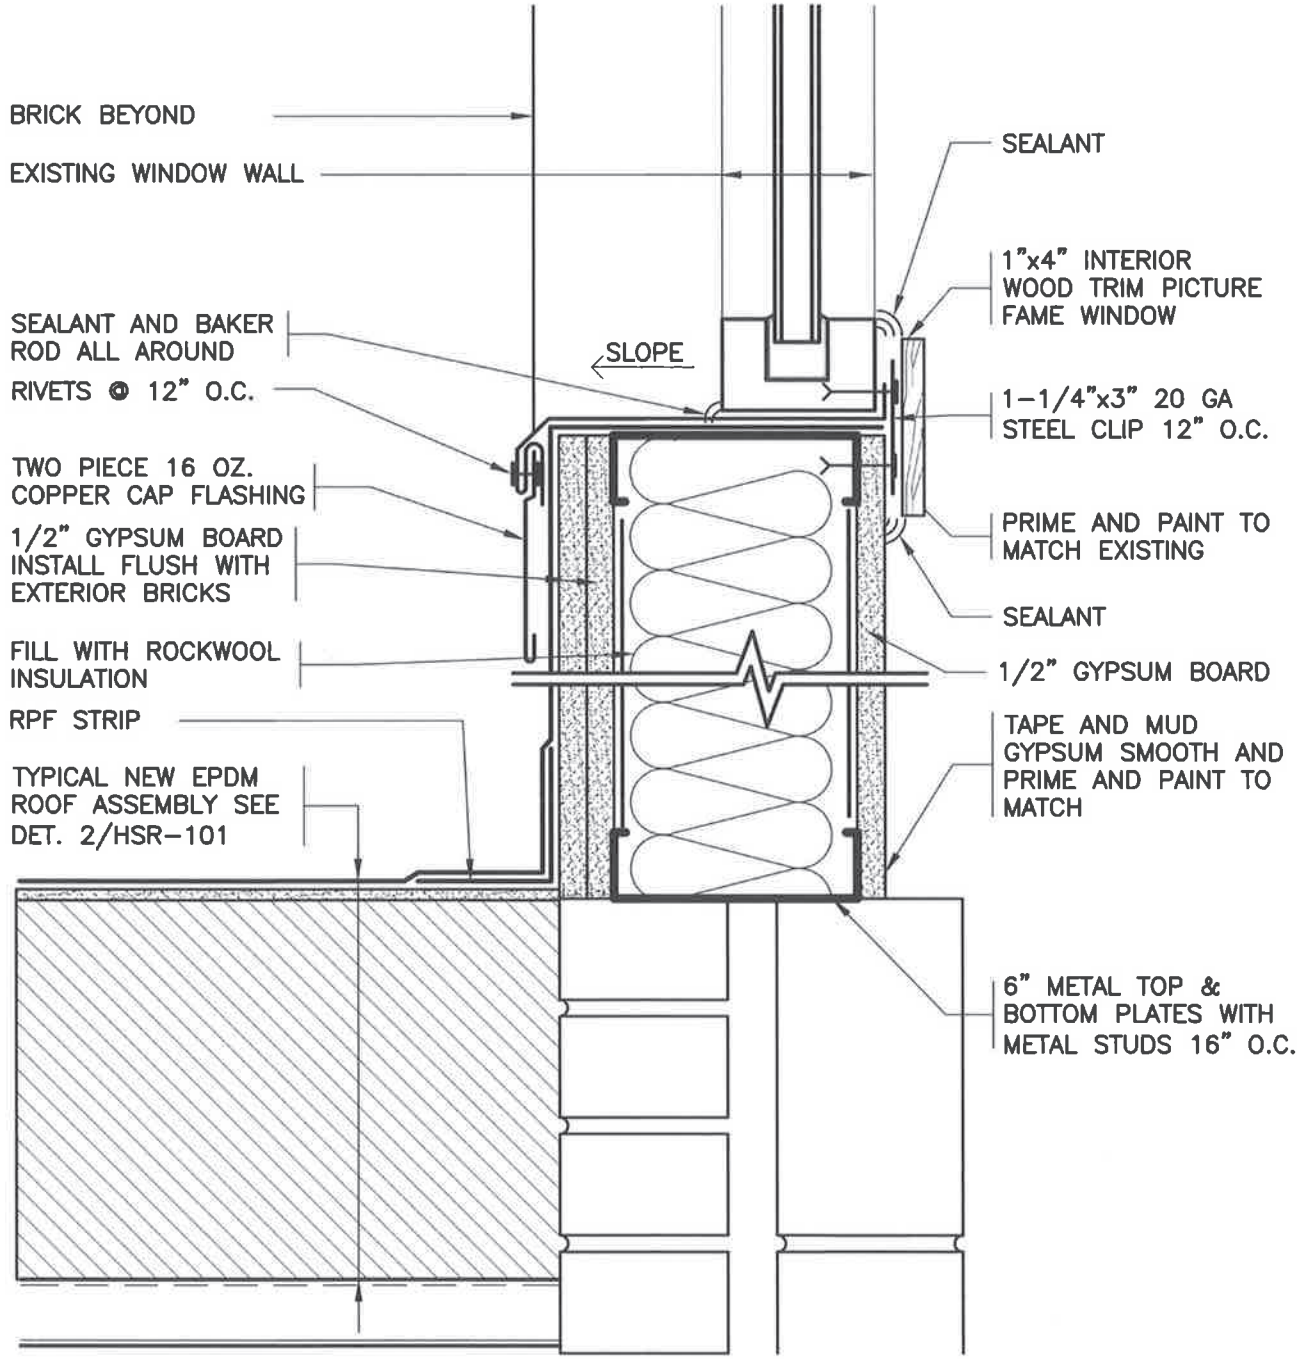

16 REVISED WINDOW
SCALE: 0" 1" 2" 4" 8"